

TEXET

15 INCH MULTIMEDIA DIGITAL PICTURE FRAME



User Manual

DPF-1501

Thanks for purchasing TEXET'S Digital Photo Frame (DPF-1501), please read this manual carefully before using the machine and retain it for future reference.



SAFETY PRECAUTIONS

Thanks for purchasing our digital photo frame **DPF-1501**. Before operating this player, please read this manual and retain it for future reference.



This symbol is intended to alert the user of the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



This symbol is intended to alert the user of the presence of important operation and maintenance instructions in the Digital Picture Frame User’s Manual.



CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRONIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



CAUTION
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE PLASTIC CASE OR SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.



SAFETY PRECAUTIONS

Thanks for purchasing our digital photo frame. Before operating this player, please read this manual and retain it for future reference.

Warning

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

To avoid electric shock, do not touch the plug with moist or wet hands.

Please immediately cut off power supply if you notice any abnormality.

Do not attempt to open the digi frame to change or refit any parts. Refer to Qualified Personnel.

Safety Notice

Ensure correct voltage supply to the machine before use.

If liquid and dirt should fall onto frame, remove plug. Only resume use once qualified personnel have confirmed it as safe to use.

Always unplug the power adapter after use.

Location

Put frame in well ventilated location to avoid over heating.

Do not place frame in hot room or in direct sunlight.

Stand frame horizontally on a flat, level surface, or hang firmly on to the wall.

Do not place frame in dusty environments.

Condensation

Dew may form if you transfer the frame suddenly from a cold to warm location. If condensation occurs and the frame does not start normally, leave for 3 hours before using again in order to allow the temperature of the unit to balance with its environment.

Cleaning

Use a soft cloth with a SMALL AMOUNT of neutral wash to clean the unit casing, screen and remote control. Do not use abrasive, alcoholic or caustic based substances.



Table of Contents

Introduction.....	5
Main Features.....	5
Getting Started.....	6
Package Contents.....	6
Installing your unit.....	7
Connecting to a PC.....	7
Operation.....	8
Controls.....	9
Using your Remote Control.....	10
Inserting Memory Cards.....	11
Main menu.....	12
Viewing Pictures.....	13
Watching video.....	15
Listening to MP3 music.....	18
File Management.....	20
Playing a slideshow with music.....	20
Copying and Deleting Files.....	22
Using the SETUP option.....	23
Technical Support.....	24
Frequently asked questions.....	24
Specifications	26



For further information on the TEXET range, please refer to www.texet.com

Introduction

Congratulations on your purchase of *TEXET* Digital Picture Frame, model DPF-1501

Before operating the unit, please read this manual thoroughly, and retain it for future reference. This manual will help you use many of the exciting and useful features that will make your Digital Picture Frame viewing more enjoyable.

This Digital Picture Frame lets you view digital pictures directly from your camera's memory cards. You will be able to create a slideshow using multiple transition effects or display one picture at a time. No computer, digital camera or Internet connection is required.

This Digital Picture Frame is compatible with the following popular memory card formats: CompactFlash®, SD™, XD, MultiMediaCard™, and Memory Stick®.

It can also read files stored on a USB Flash drive using the USB host port.

Main Features

- Displays digital pictures (JPEG) without a computer
- Simply insert a compatible memory card into the Digital Picture Frame to show photos, play MP3 music or supported video files (memory card not included).
- Compatible memory cards include Secure Digital Card (SD), MultiMedia Card (MMC), Memory Stick (MS), XD Cards & Compact Flash
- Able to read files located on a USB Flash drive
- Instantly plays MP3 music with the integrated speakers.
- Instantly plays MPEG4 files stores on supported memory cards.
- Supports up to 12 Mega Pixels image files (JPEG format).
- Compatible with most digital cameras' stored JPEG images and motion JPEG files.
- Includes a credit card style remote control
- Bright 15" TFT active matrix LCD screen.
- Automatic slide show with multiple transition effects.
- Plays slide show with MP3 music on the background.
- User-friendly on-screen display lets you access all controls easily.



Getting Started

Package Contents



Digital Picture Frame



User Manual



AC/DC Adapter



Remote control



USB Cable

Installing your unit

Open the package and remove the protective foam. Remove the protective sleeve from the unit.

Install the Digital Picture Frame stand at the back of the unit.

Plug in the AC adapter into power outlet. Plug the other end into the unit.

After the content is stored on the target flash media; insert the media into the correct slot.

Turn power to ON position via the ON/OFF switch.

Connecting to a PC

The Digital Picture Frame has a USB port for connection to a PC (USB Slave) and a second USB port for connection to other devices such as a Flash Drive, USB card reader, or a camera (USB Host). When connected to the PC you can drag-and-drop content from the PC to the memory card. You can also delete content from the memory card.

NOTE: USB Slave and USB Host can not be used at the same time.

Operation

This Digital Frame is extremely easy to operate:

1. Remove memory card from camera:



 
2. Insert memory card into the frame with face away from the unit:



3. The digital photo frame is ready for use:




Controls

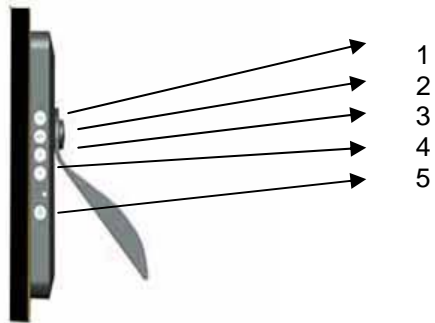



1, AUTO	2, MENU	3, PREVIOUS
4, NEXT	5, POWER	

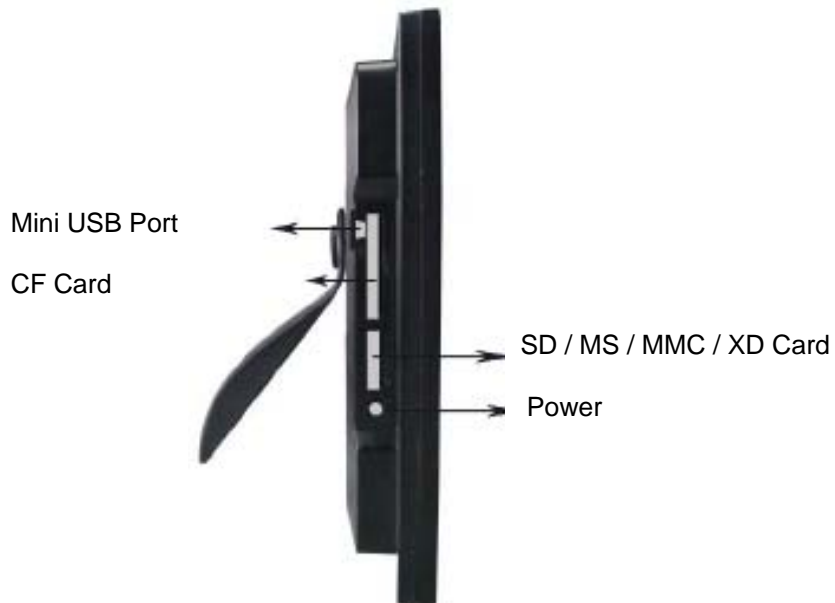 1, AUTO: EXIT
 2, MENU: PLAY / PAUSE



Using your Remote Control

The following table briefly describes the remote control functions

Button	Description
On/Off	Switch on/off the frame
Card Selection	Select type of memory card
Vol -	Decrease volume
Vol +	Increase Volume
Slideshow	Start the slideshow
Music	Display the music menu
Photo	Display the photo menu
Rotate	Rotate the current picture
Zoom	Zoom the current picture
	Play/Pause & Display the OSD Menu
	Stop
Setup	Display the setup menu
Arrows	Navigate on screen





Inserting Memory Cards

The Digital Picture Frame is compatible with the following memory cards:

Secure Digital™ Card (SD)
MultiMedia™ Card (MMC)
Memory Stick™
CompactFlash™ (CF) Card
XD Picture Cards

Insert the memory card with the front label facing AWAY from you. Do not force the memory card into the memory slot. If you are not able to easily insert the memory card completely, you may have inserted it the wrong way.

Note:

The Digital Picture Frame will ONLY recognize digital pictures stored in JPEG format. Digital pictures stored in other formats will be ignored by the device.

Make sure you have at least one picture/music/video file stored on the memory card.

You also can use a USB flash drive in the exact same way as you would use a memory card. Simply copy files on the flash drive and insert it at the right side of the unit in the USB Host plug.

Main menu

Upon turning on the Digital Picture Frame, you will go straight to the MENU screen. To set the Auto Start feature Choose the SETUP screen. Use the left/right arrow to go to the “Set up”. Press **Play** button to enter the options screen. Use the Up / down arrows to choose your auto start option. Press the “**Card Selection**” button to show the following menu:



Use the left and right arrows to move inside the menu and then press “Play” to continue

Note: In all menus, pressing the “Card Selection” button will bring you back to the main menu

Function	Description
Setup	Set system menu
Calendar	Display calendar, clock, alarm
SD/MMC/MS/xD	Play files on SD/MMC/MS/xD memory card
CF	Play files on CF memory card
USB	Play files on USB flash drive

NOTE: Icons of above functions shall appear automatically on MENU screen when correspondent memory card is inserted. Icons shall disappear when correspondent card is removed from card slot.

Viewing Pictures

Make sure you have at least one picture on your memory card or your USB flash drive. When this is done:

Select the desired flash media on main menu. (SD/xD/CF/MS/USB)
 Select the "PHOTO" option from the menu and press "Play"



 
A Photo thumbnail will appear. Use UP/DOWN/LEFT/RIGHT arrows can move the highlight. If the highlighted is a folder, press Play to enter the folder.





Otherwise press Play to enter the full screen photo (pause mode) and press Play to enter into slideshow mode.

Once a slideshow is playing or a picture is being shown, press the Play button. The following menu will appear:

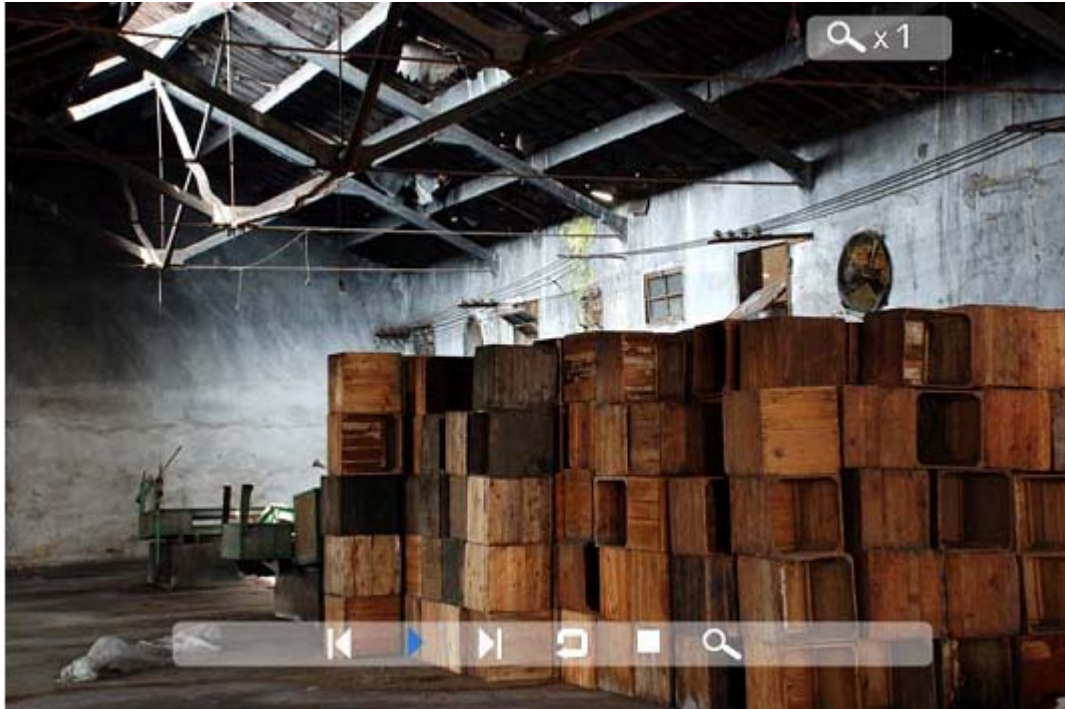

◀ Previous

Play previous picture in the picture list

▶ Play or || Pause

Play or pause the current slideshow.

▶▶ Next

Play next picture in the picture list

🔄 Rotate

Use the rotate function to change the picture orientation to either portrait or landscape.

■ Stop

Stop slideshow and return to photo thumbnail.

🔍 Zoom

Increase the size of the picture by 2/4/8/16/1 times.

Watching video

The Digital Picture Frame supports the following video formats:

Motion JPEG (avi): video format used by most digital cameras
 MPEG 4

 
Make sure you have at least one video on your memory card or your USB flash drive. When this is done:

Select the desired flash media on main menu. (SD/xD/CF/MS/USB)

Select the "MOVIE" option from the menu and press "Play"



A list of all movie files will be listed on the left side of the screen. The right side consists of the movie preview window and information display of the current movie. Use Up/Down arrows to select the movie and press Play to play.

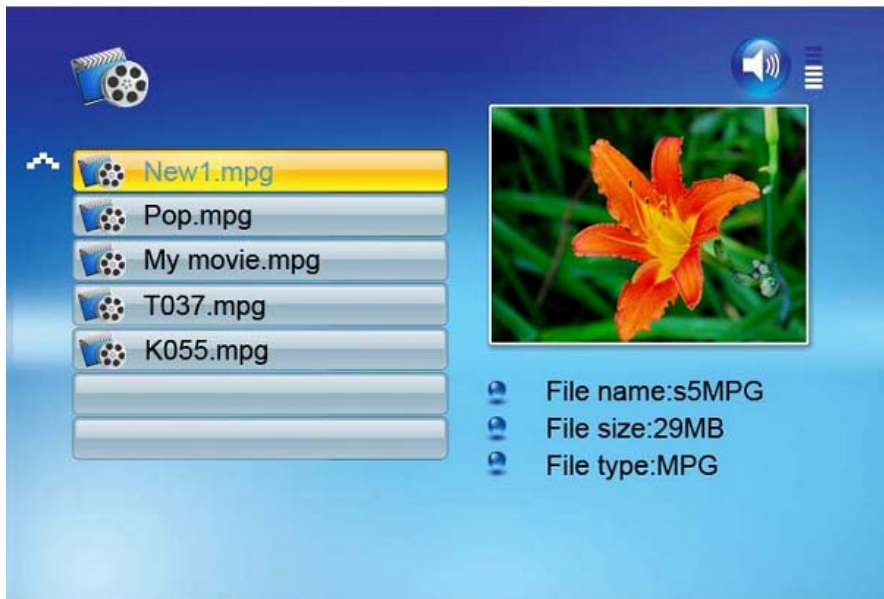

Once a movie is playing, press the Play button on the remote control. The following menu will appear:



⏪ Previous

Play previous movie in the play list

Fast Forward

Play forward the movie by 2/3/4 times speed.



Play or Pause

Play or pause the current slideshow.

Fast Backward

Play backward the movie by 2/3/4 times speed.

Next

Play next movie in the play list

Stop

Stop the movie and return to the playlist

Zoom

Increase the size of the picture by 2/3/4/1 times.



Listening to MP3 music

Make sure you have at least one MP3 file on your memory card or your USB flash drive.
When this is done:

Select the desired flash media on main menu. (SD/xD/CF/MS/USB)
Select the "MUSIC" option from the menu and press "Play"



A list of music files will be listed on the left side of the screen. The right side consists of the frequency chart and information status bar. The song information area is below the status bar. Use Up/Down arrows to select the music file and press Play to play.



Press VOL+ to increase the volume or VOL- to decrease the volume.

Press Play/Pause button on remote control to play or pause the music file.

Press Stop button on the remote control to return to the list of music files.

File Management

Playing a slideshow with music

Ensure you have at least one picture on your memory card or your USB flash drive. Additionally, you must have one MP3 file saved on the selected memory card/USB. When this is done:

 
Select the desired flash media on main menu. (SD/xD/CF/MS/USB)

Select the "FILE" option from the menu and press "Play"



A list of all files on the selected memory card will be listed on the left side of the screen. The right side consists of the file information. Use Up/Down arrows to select a picture file and press Play to enter a full screen photo (pause mode). Press Slideshow button on the remote control, an audio slideshow will begin automatically.

Once an audio-slideshow is playing, press the Play button. The following menu will appear:

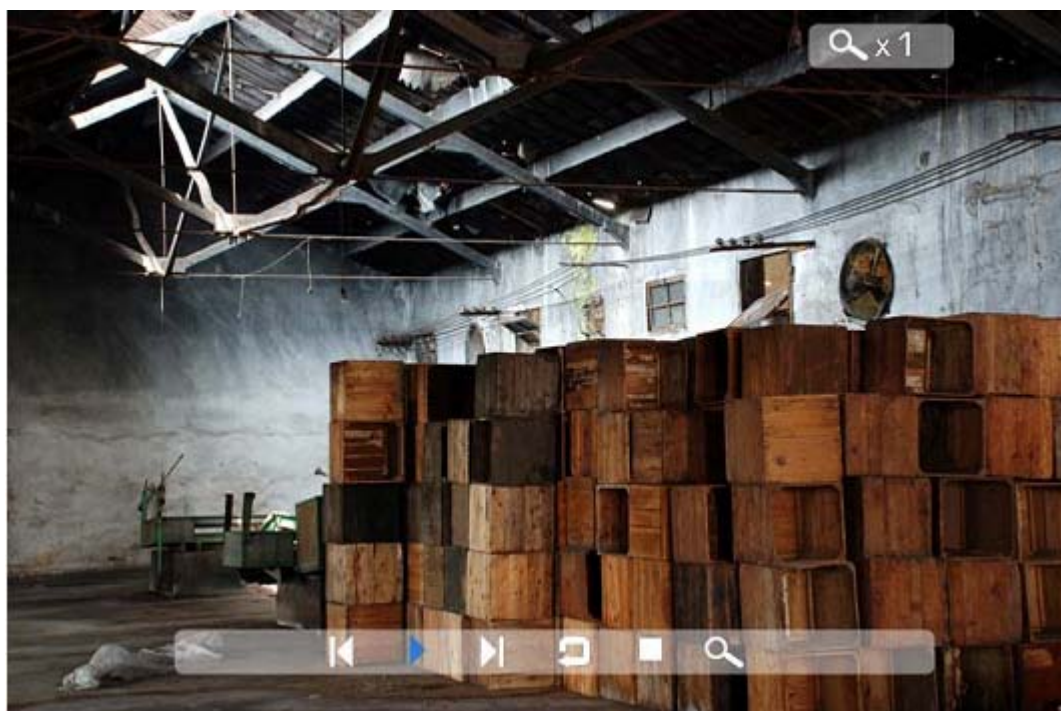

◀ Previous

Play previous picture in the picture list

▶ Play or || Pause

Play or pause the current slideshow.

▶| Next

Play next picture in the picture list

🔄 Rotate

Use the rotate function to change the picture orientation to either portrait or landscape.

■ Stop

Stop slideshow and return to photo thumbnail.

🔍 Zoom

Increase the size of the picture by 2/4/8/16/1 times.

VOL

Press VOL+ or VOL- on remote control to increase or decrease the volume



Copying and Deleting Files

To copy and delete files on your memory card, USB drive.

Copy

Select the desired flash media on main menu. (SD/xD/CF/MS/USB)

Select the "FILE" option from the menu and press "Playyes"

A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file. Repeat for all files that you want to copy

Press the "Setup" button to display the Copy and Delete menu. Select Copy function and Play to display the C:/ and D:/ menu.



Use Up/Down arrows to select the file destination folder. Press Right button to confirm.



Press Play to start copying the file. Press Stop button will bring you back to the Copy and Delete Menu.

Delete

Select the desired flash media on main menu. (SD/xD/CF/MS/USB)

Select the "FILE" option from the menu and press "Play"

A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file. Repeat for all files that you want to copy. Press the "Setup" button to display the Copy and Delete menu. Select Delete function and press Play. File will be deleted. Press Stop button will bring you back to the Copy and Delete Menu.

Using the SETUP option

The following options can be changed by using the "SETUP" option from the main menu:

Function	Description
Language	Includes English, French, Spanish, German, Italian
Slideshow time	Slideshow duration: 3s/5s/15s/1mins/15mins/1hr
Slideshow mode	Off, Random, Fading, Bottom_to_top, Top_to_bottom, Left_to_right, Right_to_left, Door_close, Door_open, Hori_cross, Verti_cross
Music Repeat Mode	Repeat one, Repeat all, Repeat off
Movie Repeat Mode	Repeat one, Repeat all, Repeat off
Display mode	Normal, Wide
Time	Year/Month/Date/Time setup
Alarm	Alarm Time/Alarm Music/Alarm On/off setup
Default	Recover the factory default setup

Note: When entered into "Setup" menu, you can only use remote controller for operation.



Calendar/Clock Display

Upon turning on the Digital Picture Frame, you will go straight to the MENU screen. If you select Calendar/Clock and press Play, you will go to Calendar/Clock screen. If the Alarm is turned on, it will also show the alarm time. A picture slideshow will begin at the picture preview window at the right part of the screen.



Technical Support

Frequently asked questions

1) Q: Can I use touch-enabled technology for my Digital Picture Frame?

A: The LCD screen does not support touch-enabled technology. Please use the buttons or remote control to control the Digital Picture Frame.

2) Q: If I keep showing the same photo for a long time, will it damage the LCD screen?

A: No. The Digital Picture Frame can display the same photo continuously for a long time. But it is recommended not to show the same picture continuously for more than 1 month.

3) Q: How do I store music files?

A: First, use a personal computer and popular audio editing software to convert your music to MP3 format. The Digital Picture Frame will only play MP3 files so all Windows Media Player™ and/or iTunes™ files will have to be converted first. You can use a card reader or your digital camera to transfer those files to your memory card.



4) Q: Does the Digital Picture Frame have built-in memory?

A: No.

5) Q: What is the maximum picture size?

A: The Digital Picture Frame is able to display pictures up to 12 Mega Pixels.

6) Q: What is the best picture resolution displayed on the screen?

A: The frame's best resolution is 1024x768 pixels.

7) Q: How come the Digital Picture Frame does not show some of my photos?

A: The Digital Picture Frame is designed to show photos following the same camera industry standards format as digital cameras. This format is a JPEG format. Images, such as web images, scanned images, or photos in RAW format, are not stored according to camera industry standards and therefore cannot be displayed correctly on the Digital Picture Frame. Please use your PC applications to convert such images into standard JPEG format before viewing them on the Digital Picture Frame.

Troubleshooting

Symptom	Cause	Corrective Actions
Digital Picture Frame doesn't power on	The POWER connector to the unit is not securely inserted.	Make sure you connect the AC adapter to the frame properly. When you connect the AC adapter to the frame and power up the unit, even without a memory card, you should see a blank screen. If you don't see the lit screen, check if the power is connected to the Digital Picture Frame and make sure it is securely attached.
No Start-up screen	Memory card is not inserted correctly.	Insert a supported memory card
The File doesn't play	Incompatible File Format	Make sure there is at least one supported photo file on the memory card. Compatible Photo format: JPEG Compatible Music format: MP3 Compatible Video format: Motion JPEG (avi), MPEG4.
Video doesn't play properly	Slow Memory Card	Make sure you use a high-speed memory card to play video files.
Small video size on the screen	Low Video Resolution	Most digital cameras take video in 320x240 or lower resolution. The best supported resolution of a photo or video is 640x480. Use the Zoom button on the remote control to enlarge it.



Specifications

Type	15 inch Digital Picture Frame
Unit Size	412(L) x 337(H) x 51(W)
Resolution	1024 x 768
Alimentation	12 V
Consumption	10 Watts
Working Temperature	-20 to +65 degrees
Luminosity	350cd/m ² max.
Contrast	350:1
Viewing Angle	40/70/70/70 (CR=10)
Response Time	18ms
Display Mode	4:3
File Format	JPEG, MP3, MPEG4
Photo Size	12 Mega Pixels
Current	AC110—240V (50HZ—60HZ)
Cards	SD/MMC/MS/CF/XD/USB
USB ports	USB Host, USB Slave
Package Contents	Digital Picture Frame AC/DC Adapter User Guide Remote control USB Cable