
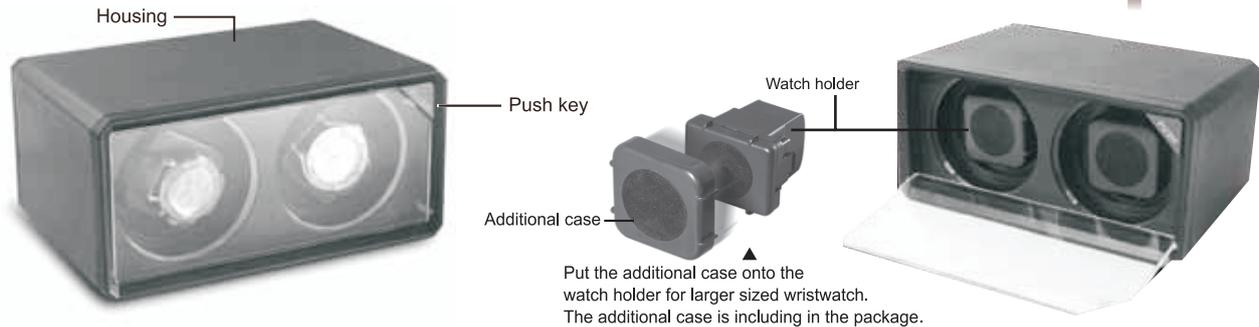


Instruction Manual

ITEM NO.: KA076

- Thank you for purchasing this great product.
- Please take a few moments to read through the manual to ensure proper operation.
- Please keep the instruction manual for future reference.

The switch and adaptor port can be found on the rear side of the unit.

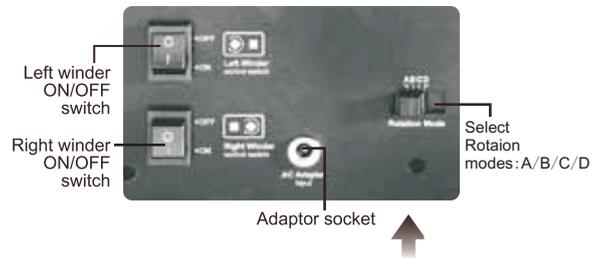

Item Specification

Power	Input:AC/100-240V; Output:DC/4V 500mA		
Feature	a. Four Rotation modes: A/B/C/D. Each mode performs a different winding sequence (described below). b. Individual switch control for each winder. c. Temperature:Operate between 5°C to 40°C.		
Size	230x159x112 mm (WxDxH)		
Weight	905g	Accessory	AC Adaptor

Note:

- * Please use the AC adaptor DC/4V 500mA supplied with the unit.
- * Remove the adaptor when the winder is not in use.
- * Always turn off the power when inserting or removing watches.
- * Don't shake or rotate when winder is stationary.



*. Hereby we would like to provide TPD (Turns Per Day) for your reference only as below,
 Mode A: 1440 turns; Mode B: 1440 turns; Mode C: 5760 turns; Mode D: 2152 turns

Operation:

- Insert the adaptor into the socket located on the back side of the product and plug it into the electrical outlet.
- Open the front cover using the 'PUSH' button and pull out the watch holder using your index finger and thumb.
- Place the watch around the watch holder and lock the watch holder back into place.
- Turn the 'ON/OFF' switch to 'ON'.
- Select one of the Rotation modes by turning the switch to either A,B, C or D and then the corresponding cycle will begin.
 - Mode A : The winder will rotate clockwise for 6 minutes, then stop for 30 minutes, and then it will repeat this cycle.
 - Mode B : The winder will rotate counterclockwise for 6 minutes, then stop for 30 minutes, and then it will repeat this cycle.
 - Mode C : The winder will rotate clockwise for 20 minutes, then stop for 10 minutes, then it will rotate counterclockwise for 20 minutes, then stop for 10 minutes; then it will repeat this entire cycle.
 - Mode D : The winder will rotate clockwise for 10 minutes, then counterclockwise for 10 minutes. It will repeat this cycle for 3 hours continuously, and then when it has finished, it will stop completely for 9 hours. Once the 9 hour rest is complete, it will repeat this entire cycle.
- Close the cover.

Attention:

- * Please remove the A/C Adaptor when the Watch-Winder is not in use.
- * Do not place or remove a watch on the watch holder while it is moving.
- * Please dispose of this product responsibly at an approved disposal site or recycling facility. Do not dispose of this product in normal household waste.

